


IDDE Catchment Investigation Procedure

Step 1. Records review

Applies to all Problem, High priority, and low priority basins (or outfall catchment areas) in the priority area.

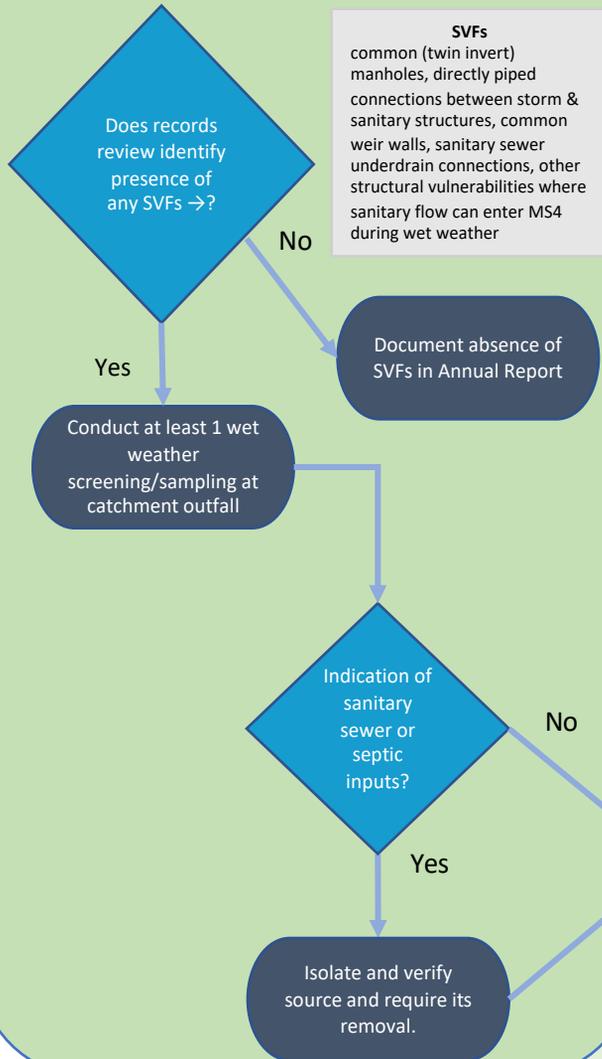

SVFs
common (twin invert) manholes, directly piped connections between storm & sanitary structures, common weir walls, sanitary sewer underdrain connections, other structural vulnerabilities where sanitary flow can enter MS4 during wet weather

Step 2. Storm drain network investigation

Applies to all Problem, High priority, and low priority basins (or outfall catchment areas) in the priority area.

